



When the exhaust port and the well are open to atmosphere or when the exhaust line is inside the well the liquid level inside the pump to start the discharge cycle is as shown. The gas pressure inside the pump and outside the pump are the same. Only the higher liquid level outside the pump will cause it to fill to the cycle activation level

